





ZH LED Display Control System

LED Mobile Async Operation

- 1: Download the software app from the website (www.zhoonghanged.com/en)
download center: LED Mobile Async
- 2: First and all the hardware device link well, then download and install the APP:
LED Mobile Async

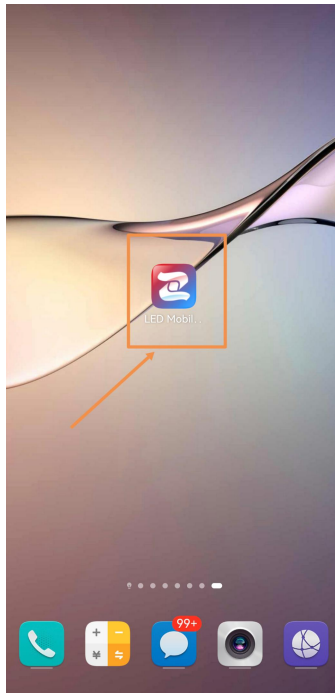


- 3: Open the App, click“Search Devices” to link with WIFI

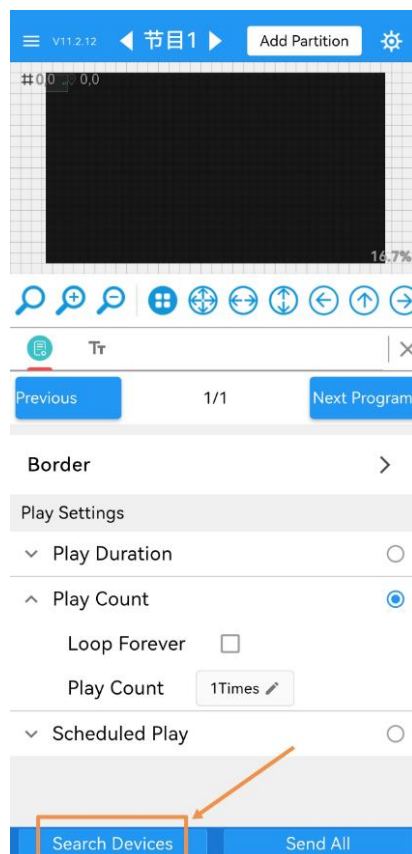





ZH LED Display Control System

4: The WIFI begin with “ZH-XXX”, (Wi-Fi is enabled by default and can be connected to directly)

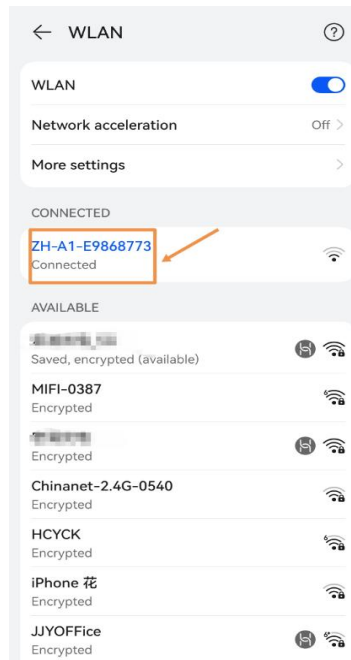

5: Back to APP, make sure the WIFI link well (will show the device model at Bottom-left corner of the APP), the click “⚙️”to set the display parameter

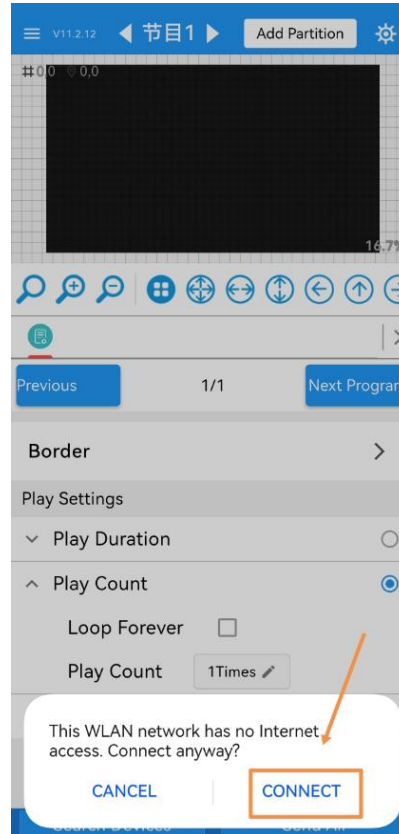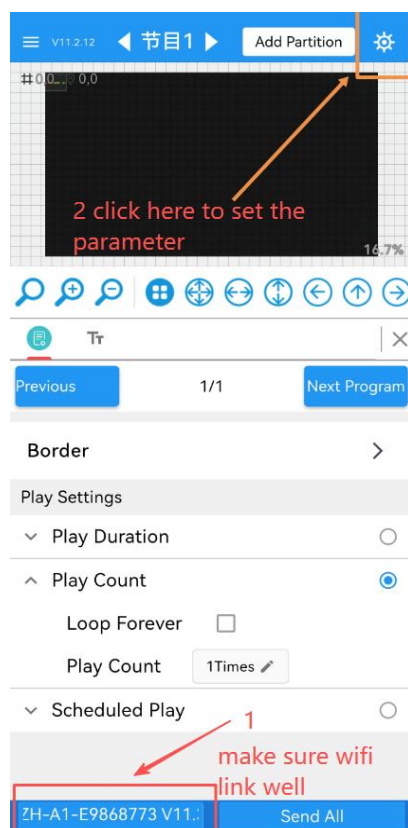


Notes: If the page show “This WLAN network has no Internet access, Connect anyway?”




ZH LED Display Control System

Just choose and Click “CONNECT” is ok.

6: Click “Screen Parameter Settings”

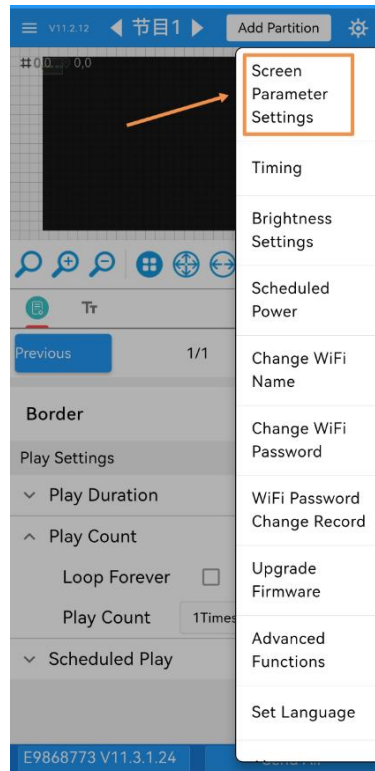


7: Select close “Screen parameter Lock” and choose Control card model, then set the display pixel as it “width” and “height”

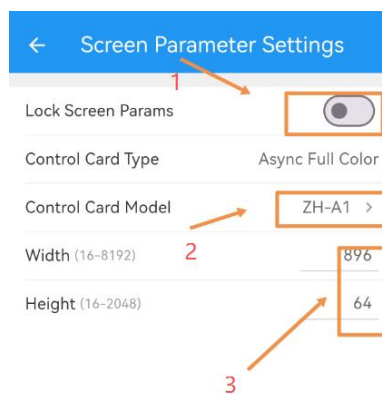



ZH LED Display Control System


8: Add program. Click “Add Partition”, can choose Text/Photo/Video/Digital Click/Clock Dial/Picture Clock/Timer/GIF and so on as requirement

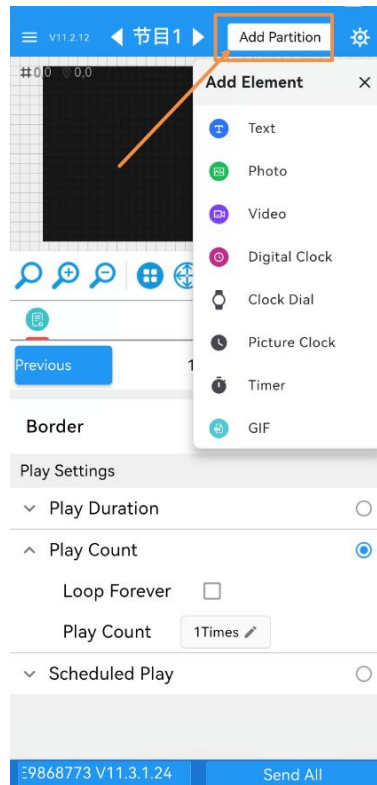


9: Multi-partition setup. Two or more partition can be choose and added.
Such as combining video and text—the position and size of each partition can be adjust by dragging its borders.



ZH LED Display Control System

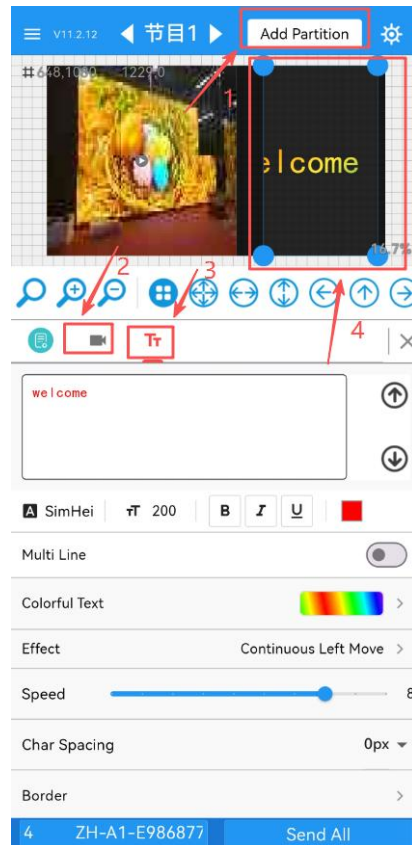

10: Send the program. After all the partitions set well, click “ Send All” at the bottom right corner of the software to send the content to LED screen.

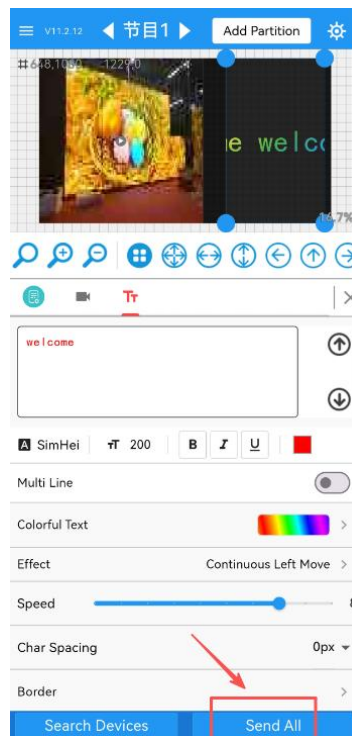

11: Change the WIFI password.


When sending program content for the first time, please change the Wi-Fi password and memorize this password, as it will be required for subsequent connections to the




ZH LED Display Control System

device's Wi-Fi.

(Notes: The device's Wi-Fi is enabled by default, it need to set a password while sending content for the first time!!!)

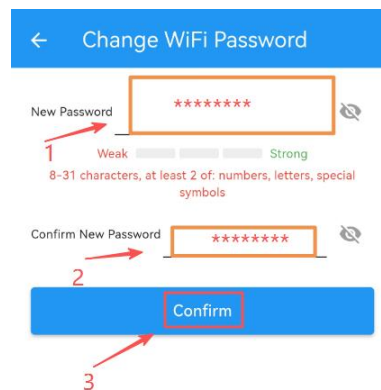

12: Re-link the Device WIFI, and fill in the WIFI password as just set in APP.

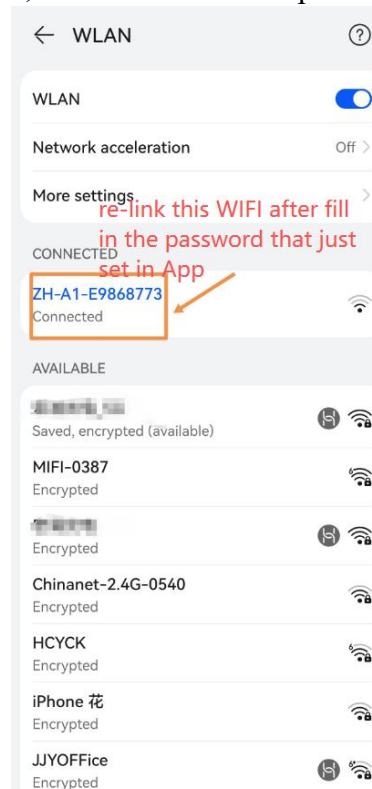



13: Return to the app to continue sending program content.

Make WIFI link well, and click “Send all”, then program content transmission



ZH LED Display Control System

completed.

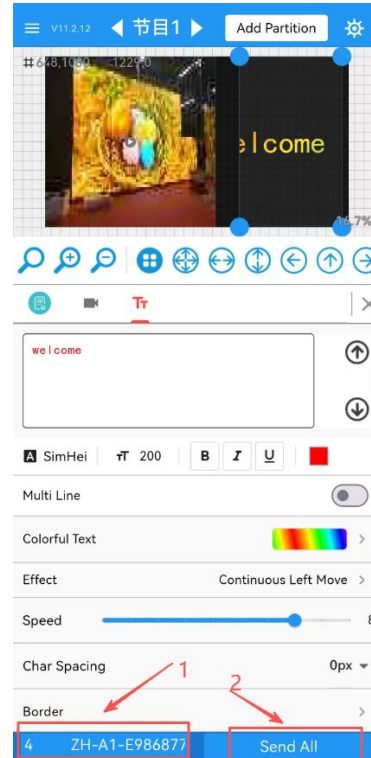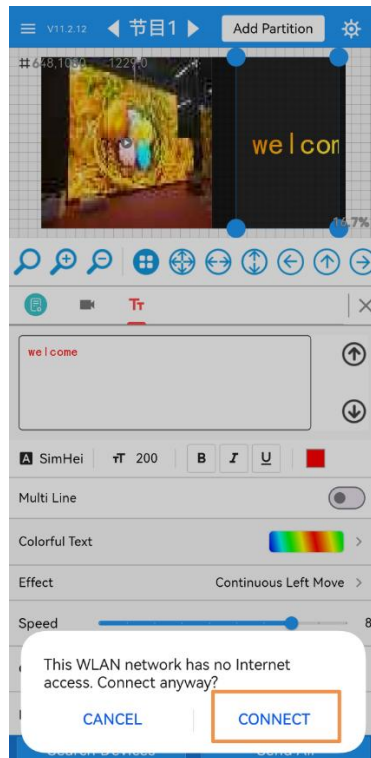

(Notes: If the page show “This WLAN network has no Internet access, Connect anyway?
Just choose and Click “CONNECT” is ok.